

ACCELERATED EJECTOR

ES Acelerador Expulsión DE Vorschub-Auswerfer

IT Acceleratore di Espulsione PT Acelerador de Extracção FR Accélérateur d'Éjection




AE

EJECTION



Patented

● Cad Insertion Point

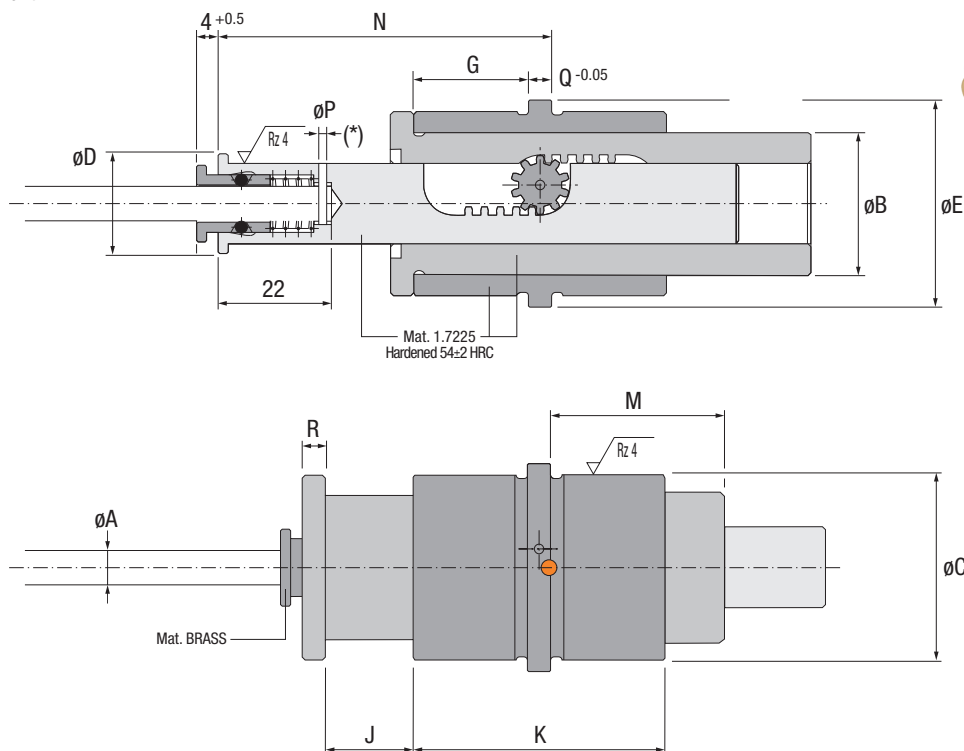

Ref.	A	B	C	D	E	F	G	J	K	L	M	N	P	Q	R
AE.031620	3	16	20	12.5	22	13	14	8	32	22	17	37	-	4	3
AE.041620	4	16	20	12.5	22	13	14	8	32	22	17	37	-	4	3
AE.052430	5	24	30	16	34	16	20	15	44	36	27	57	2	4	3
AE.062430	6	24	30	16	34	16	20	15	44	36	27	57	2	4	3
AE.082430	8	24	30	17	34	17	20	15	44	36	27	57	2	4	3
AE.103036	10	30	36	21.5	40	21	28	20	62	46	34	78	2	6	4
AE.123036	12	30	36	21.5	40	21	28	20	62	46	34	78	2	6	4

IMPORTANT !

- (*) Possibility to key for using a curved ejector pin. (except AE.031620 & AE.041620)
- (*) Posibilidad de usar un antiguo para los expulsores con forma. (excepto AE.031620 & AE.041620)
- (*) Verdrehsicherung möglich für einen Auswerfer mit Kontur. (außer AE.031620 & AE.041620)
- (*) Possibilità di usare un antirrotazione per gli espulsori sagomati. (salvo AE.031620 & AE.041620)
- (*) Possibilidade de posicionar para extractores com perfil. (except AE.031620 & AE.041620)
- (*) Possibilit  d'indexer l' jecteur. (sauf AE.031620 & AE.041620)

Installation Guidelines

Consejos de Instalaci3n · Richtlinien zur Installation · Consigli di Installazione · Instruções de Instalaç3o · Mode d'Installation

